


## Installation Instructions for Hidden Hangers


- 1 Place the board on the wall where it is to hang.
- 2 Draw a line with a pencil along the bottom edge of the board.
- 3 On this line mark the inside edge of the plastic corner at each end.

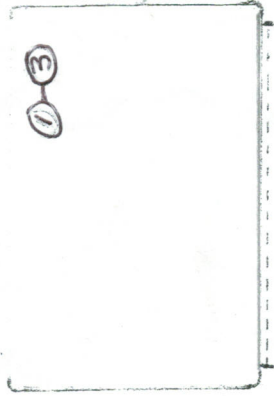


- 4 Install 1 hanger at each end using the screws provided.

These hangers should be no wider than the inside measurement between the plastic corners. Locate the screw at the top of the slot. Line the bottom of the hanger up with the line. If there is no stud or timber to screw into use an appropriate anchor system.


ie: for Gib walls use a toggle or Zipit or similar for block and concrete walls use a rawl plug.

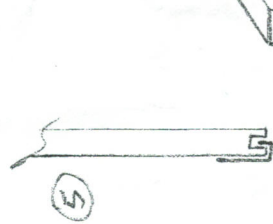

- 5 Locate the board into these hangers and ensure the board is level and in the correct position. The hanger locates in the groove in the frame.
- 6 Mark the top of the board with a pencil as for (2) above.

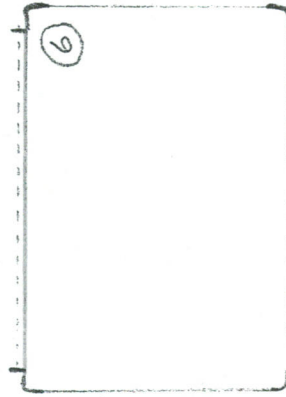


- 7 Install 1 hanger at each end as for 4 above, but locate screw at the top of the slot. Tighten the screw only sufficiently to hold the clip but allowing it to slide when pushed. Push the clip up to the top of the slot

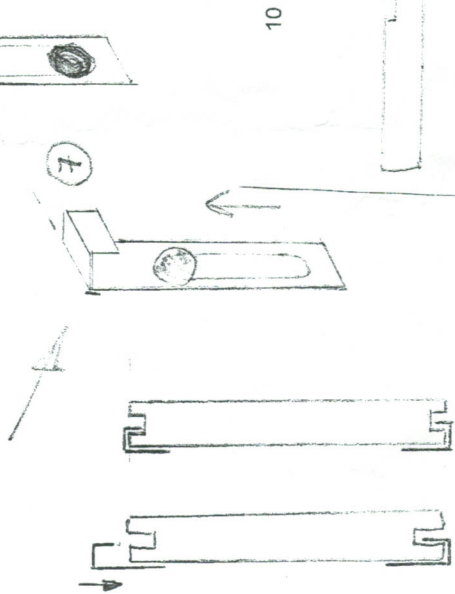

- 8 Locate board into bottom clips, push top clips down to hold in place.

- 9 Use all hangers supplied in the pack. Use half top & bottom. Install end ones as detailed above and space remaining evenly across board.

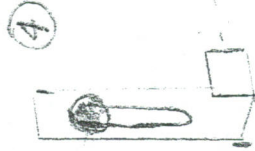

10 Pen rail clips in, however the rail needs to be cut out to suit the position of the clips. Use a hacksaw, cut 10mm down each side of groove & use pliers to remove. (as shown)

